


# OPERATING INSTRUCTIONS

## #3217 Electronic Laptop Saver

**CAUTION: DO NOT STORE KEYS IN THE SAFE!**

### 1. INSTALLING THE BATTERY

The safe requires one X 6F22 9V battery. The battery compartment is located on the back of the door. Remove the battery cover and install the battery compartment.

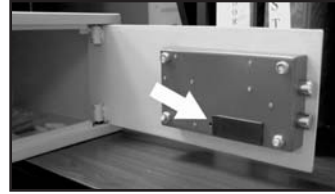

step 1

### 2. PROGRAMMING THE USER CODE

**NOTE: THIS SAFE CAN STORE A "USER" CODE AND A "MASTER" CODE, SO MULTIPLE USERS CAN HAVE THEIR OWN CODE, AND THE USER CODE CAN BE UPDATED AS OFTEN AS NECESSARY.**

- A. With the door of the safe open, press the "R" key.
- B. Now press from 3 to 8 numbers that you wish to use as a new personal code, and confirm by pressing the "\*" key.
- C. Now enter your new personal code again and confirm by pressing the "\*" key. After hearing a musical sound, it means the new user code is confirmed.



step 2

### 3. PROGRAMMING THE MASTER CODE

- A. With the door of the safe open, press the "R" key, followed by pressing the key "0" twice and press the key "R".
- B. Now input the original master code (factory preset code: 8,8,8,8) and confirm by pressing the "\*" key.
- C. Now press from 3 to 8 numbers that you wish to use as a new master code and pressing the "\*" key.



step 3

cont. on page 2

# OPERATING INSTRUCTIONS

## #3217 Electronic Laptop Saver

cont. from page 1

D. Now enter your new master code again and confirm by pressing the "\*" key. After hearing a musical sound, it means that the new master code is confirmed.

**NOTE: PROGRAMMING THE CODES SHALL ONLY BE CARRIED OUT WITH THE SAFE OPEN.**

### 4. USING THE SAFE

#### **Opening the safe:**

Press the "R" key and enter your personal code and confirm by pressing the "\*". If the code is correct, you will hear a musical sound and the door will open.

#### **Closing the safe:**

Close the door of the safe, and hold closed. Press the "R" key and press the "\*" key, that will lock the safe closed.

**If you or an intruder uses the incorrect code, you will hear a beep, the display will show "error" and it will not open. If the incorrect combination code is used 4 times consecutively, the display will show "error", the buzzer will sound for approximately 1 minute. The correct code cannot be entered until after this 1 minute delay.**



step 4



# OPERATING INSTRUCTIONS

## #3217 Electronic Laptop Saver

### 5. OVERRIDE INSTRUCTION TO OPEN THE SAFE

This safe has a manual override system operated by the keys supplied.

- A. To use the key, remove the keypad on the front panel.
- B. Insert the key into the keyhole and turn the key counter-clockwise; that will open the door.



step 4


**NOTE: IN ORDER TO CLOSE THE SAFE, YOU MUST HOLD THE DOOR CLOSED WHILE INPUTTING “ R” + “\*”, OR THE SAFE WILL NOT LOCK.**

# OPERATING INSTRUCTIONS

## #3217 Electronic Laptop Saver



Installation holes on back

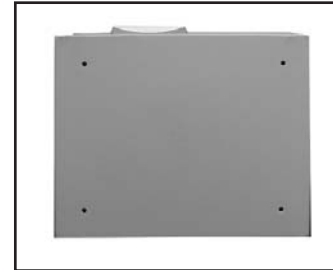

Installation holes on bottom

**Hardware:**  
includes 4 sets of each.



Refer to Template Installation Instruction Sheet, included with this safe, to complete safe installation.

Touch up paint is available for safes, please contact **Buddy Products** to order.

**CAUTION: DO NOT STORE KEYS IN THE SAFE!**

---

### **Buddy Products**

1350 S. Leavitt St.  
Chicago, IL 60608

toll-free: 800-886-8688

local: 312-733-6400

fax: 312-733-8356

web: [www.buddyproducts.com](http://www.buddyproducts.com)

e-mail: [custservice@buddyproducts.com](mailto:custservice@buddyproducts.com)