

Operation Instructions

CAUTION: Do not keep the keys inside the safe itself!

1. OPENING THE SAFE FOR THE FIRST TIME

To open the safe first time, remove the small plastic cover on the front panel ("B", see diagram 1) insert the key into the key hole and turn it counter-clockwise direction, at the same time, turn the doorknob ("A" see diagram 1) clockwise direction to open the safe.

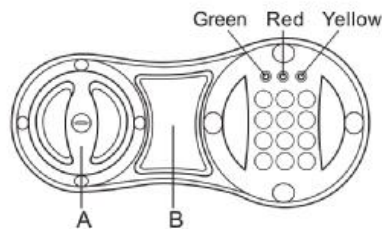


Diagram 1

2. INSTALLING THE BATTERIES

The safe requires 4x size "AA" (1.5V) batteries. Open the safe, pull the battery cover plate on the back of the door and install the batteries. Ensuring the batteries are fitted with the correct corresponding polarity. Use of alkaline batteries is recommended.

3. PROGRAMMING THE CODE

1. With the safe door open, press the red button on the back of the door near the hinge, release it and you will hear a beep.
2. Now enter your own personal code, which can be 3-8 digits long, and confirm your new code by pressing the "#" button.
3. Remember your personal code immediately and check whether your combination has been programmed or not on conditions of the safe with door open.

4. USING YOUR SAFE

To open the safe, enter your personal code followed by the "*" key, you will hear a beep and the green light will be on, then turn the doorknob ("A", see in diagram 1) in clockwise direction to open the door within 5 seconds.

If you or an intruder uses the incorrect group of numbers, it will not open. If the incorrect combination is used 3 times consecutively, you must wait for 20 seconds before reattempting. If again the incorrect combination is selected 3 times, you must wait approximately 5 minutes before reattempting access.

5. BATTERY REPLACEMENT

This safe uses 4 x AA (1.5V) batteries. If the batteries are low, the red light (in the middle of the touch pad) will warn you immediately. To test the batteries, just input your personal codes to open the safe. If the batteries are low, the red light (in the middle of the touch pad) will be on. If nothing happens, it means that the batteries are in order.

If batteries are low or finished, please replace the batteries. Open the safe, pull the battery cover plate on the back of the door and replace the 4 pieces old batteries. You must reprogram the code, using the above steps.

Use of alkaline batteries is recommended.

6. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your convenience, we have engineered a manual override system for your safe. If you forget or misplace your combination, remove the small central plate on the front panel ("B", see in diagram 1), insert the key into the keyhole and turn it in a counter-clockwise direction, then turn the knob ("A", see in diagram 1) in a clockwise direction towards the right. This will manually open your safe at any time.

7. TURNING THE KEYPAD SOUND OFF/ON

You can turn off the "Beep" sound of the keypad by entering the code "* 6 3 3". To turn the "Beep" sound on, enter the code " * 6 6" .

8. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are holes (diameter 8mm) on the back; therefore it can be fixed by the expansion bolts. The safe should be placed horizontally when installing the safe.

Buddy Products

1350 S. Leavitt St.
Chicago, IL 60608

Toll-free: 800-886-8688

Local: 312-733-6400

Fax: 312-733-8356

Web: www.buddyproducts.com

e-mail: custservice@buddyproducts.com